

# ASSEMBLY INSTRUCTIONS for Roof

**1** Locate the roof section and 2 roof peak sections.


**2** With the bend on the peaks to the inside of the roof, put 2 screws through from the top of the roof and through the hole on the bend on the peak, (outside) short ends first. Secure with nuts.

**3** Put 1 screw through the holes on the roof and peak towards the top of the roof. Secure with nut.

**4** Place one rail clip on top of the roof, insert screw through clip, roof and peak. Secure with nut.

**5** Repeat Step 2, 3 and 4 to secure the other peak to the roof section. The rail clips should be on the same side as shown in the picture. Turn rail clips up so loop is at the peak of the roof.

**6** After all 8 screws are tightened, the roof is ready to be attached to the house.

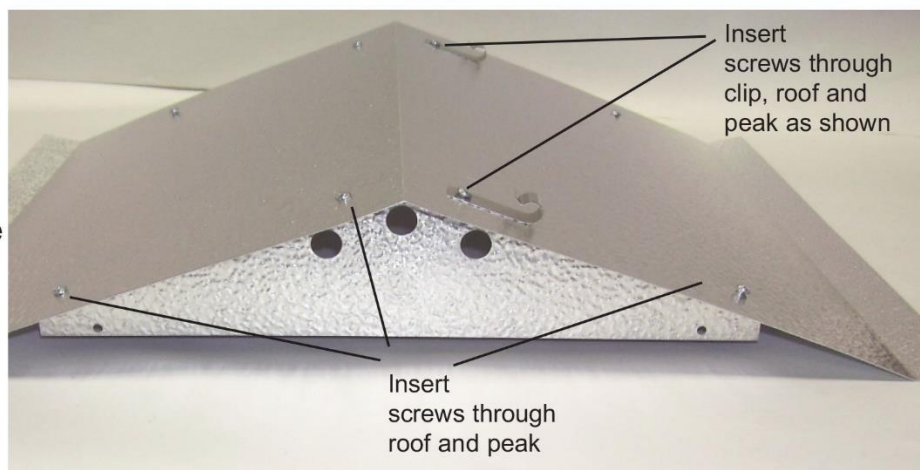

# ASSEMBLY INSTRUCTIONS

## for BirdsChoice Purple Martin House


### SREH PMSR8, PMSR12, PMSR16

w/Starling Resistant Entrance Holes

Tools Needed: Phillips screwdriver, 5/16 wrench, pliers or adjustable wrench




**1** Attach the galvanized divider stamped “A” to the top of the floor panel (across short side) on the side stamped “UP” and **through to the base plate** under the floor panel with 2 screws and 2 nuts (nuts always with white nylon insert out), do not tighten. This is an important first step-- **don't forget the base plate on the bottom!!**

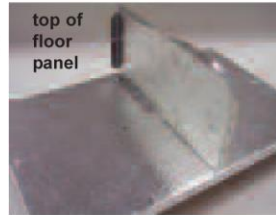

**2** Place the galvanized divider stamped “B” with slot down in the slot of the “A” divider and secure with 2 screws through the floor and base plate. Tighten all 4 screws. NOTE: Galvanized dividers only go on the bottom floor.



**3** Place 1 white side panel with the stamped “UP” facing up on the floor assembly and attach with 2 screws and nuts to the floor panel and 1 screw and nut through divider “A”. Repeat this step on the other side.

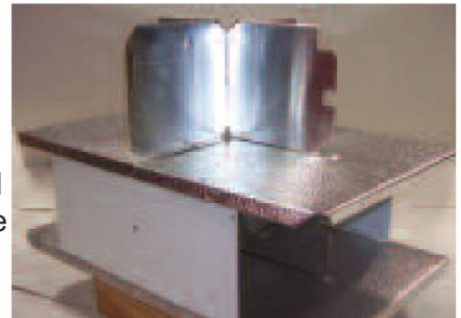


**4** Place the next floor panel on top of the completed floor unit. Repeat the instructions for placing and attaching the “A” divider and other divider (no marking). Secure with screws and nuts through the new divider, the floor and the lower dividers. Attach 2 more white side panels as in Step 3.



**5** Repeat Step 4 for each floor unit. Example: 3 floor units for PMC12 model.

**6** Attach the ceiling plate (with the stamped “UP” facing up) with 8 screws and nuts through the plate, side walls and interior dividers.

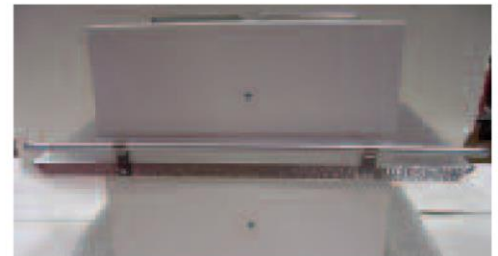

**7** Attach 2 rail clips with screws and nuts on each side of the outside of the white panels (loop of clip facing **outward**). Do not tighten. Turn the loop of the clips up, center the 19” rod along the side and snap onto the clips on each side. Tighten the 4 screws. Repeat on all floors.

**8** Attach the roof assembly to the house at the 4 screw locations.



9 Insert tabs of porch divider into door slots and twist slightly.



opening and closing these doors.

10 Install each door to the **INSIDE** of the wall panels, vents to the top. It is important to have the door up when doing this. Tighten each side enough to allow each door to remain open, but not so tight that it binds when opened & closed. **ALWAYS** swing the porch dividers to the right when opening the doors. This is how you will check the nest by

11 Attach 2 clips with screws and nuts on the short sides, but face the loop of the clips **inward**. Turn the loop of the clips up, center the 12" rod along the side and snap onto the clips on each side. Center and tighten the 4 screws.

Swing the porch dividers to the front and lock into the indent of the floor panel. The front dowel clips can be adjusted inward so that the rail will lock the porch divider in the indent securely.

12 To attach top perching rail, rotate the clips so the loop is at the peak of the roof. Center and snap the top perching rail into place.

**DOOR PLUGS:** The door plugs are used to keep the sparrows from taking over the house while the martins are wintering in South America.



**Your house is now ready for the mounting pole.**

Thank you for purchasing one of our fine products. If you have any questions or would like more information, please contact us toll-free at the number below. Visit our website [www.bird-choice.com](http://www.bird-choice.com) for information and to see more of our professional outdoor birding supplies.

**1-800-817-8833**

***Proudly made in Chilton, Wisconsin, USA according to BirdsChoice quality standards and specifications***




Shown assembled is the PMC12 - 3 Floor Coates Original

**BIRDS** choice™

professional outdoor bird supplies

477 Vogt Lane, Chilton, Wisconsin 53014

BIRDS CHOICE PURPLE MARTIN HOUSE  
**CLEANING INSTRUCTIONS**

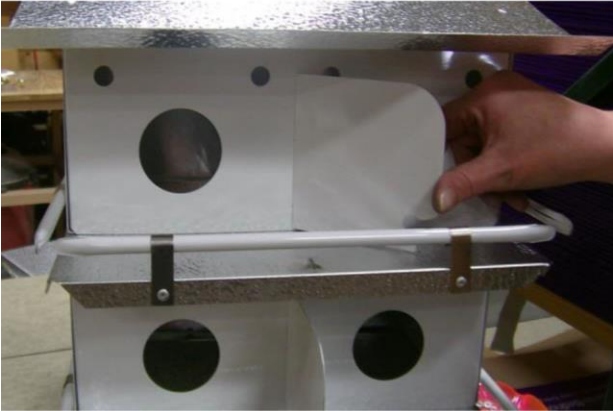


**1. Move the porch divider which locks the door panel in place will need to be swung to the right or left.**


**2. Front door panel will open forward and up to allow for easy clean out of the compartments.**



**3. Completely clean out compartments.**

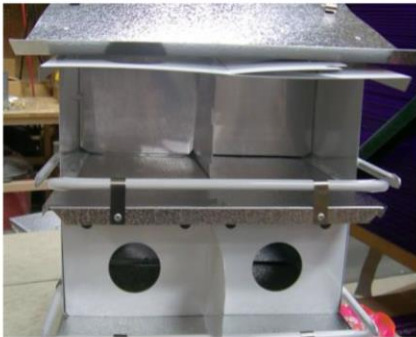

**4. Close the door panel by swing the porch divider to original locking position.**

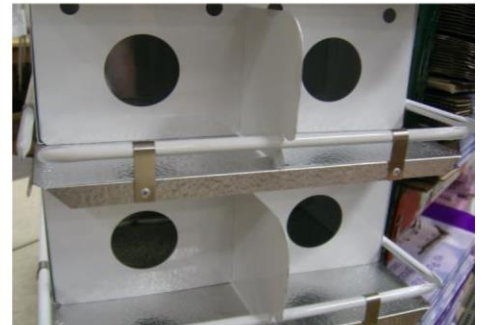

**BIRDS** choice™  
Only the best for the birds you love

If you have any questions or would like more information, please contact us toll-free, 1-800-817-8833 or email us at [info@birdschoice.com](mailto:info@birdschoice.com).