



Manufacturing Attractive Bird Products

71024 Co. Rd. 13 Nappanee, IN 46550 • Toll Free (866) 546-0423
(574) 773-4975 • FAX (574) 773-7282


Universal Nesting Tray

PARTS:

- 1 piece 5-1/8" x 10-5/8" bottom
- 2 pieces 2-1/2" x 6-5/8" sides
- 1 piece 2-1/2" x 5-1/8" back
- 1 Piece 1" x 5-1/8" dam

STEP 1: If Your compartment size is shorter than 10-3/4", use sharp scissors to cut the 5-1/8" x 10-5/8" bottom to your desired length to fit inside compartment.

STEP 2: After opening the glue bottle, glue along the outside edge of either end of the bottom to attach the 2-1/2" x 5-1/8" back.

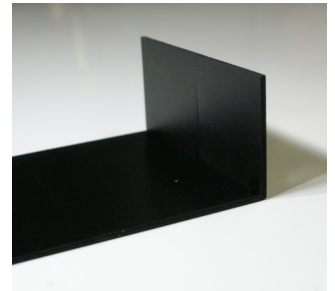

STEP 3: Glue the outside edges of the bottom and outside edges of the back. Attach two 2-1/2" x 6-5/8" sides. Note: Sides may need to be cut shorter if your bottom is shorter than 6-5/8" long.



STEP 4: NOTE: If the compartment size is short, the dam may need to be eliminated to not obstruct the martins ability to enter the compartment otherwise continue with this step. Positioned at the front of the sides, glue the 1" x 5-1/8" dam to the bottom and to both sides.



STEP 5: Peel the tape from the back of the tread strip to adhere to the bottom between the back and the dam. You may need to cut the adhesive tread strip shorter if the distance between the back and the dam is less than 5".